




52 Laxalt Dr
Mound House NV 89706

Installation Instructions for the L9080 Electrification Kit Schlage Mortise Lock

You will need to place the lock chassis on a flat surface with the latch facing you and the cover facing up. You will need to remove the four screws (52) found on the cover. Now Remove the cover (58) and set it aside with the screws.

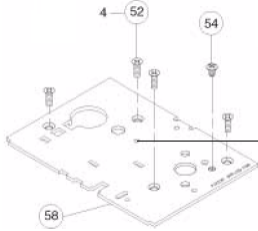

A Thread self-tapping screw into hole A (Pictured left)

- Remove and discard parts 27, 30, 39, and 47
- Remove parts 33 and 50 then set aside
- Remove parts 34, 36, and 38
- Discard part 36 and set part 38 aside

Special: Mail part 34 in to Murray and receive a \$5.00 coupon for each part returned. This offer is only good for part 34.

Note: do not loose parts 33 or 38 as they are small and important to the function of the lock.

There are 6 parts included in this kit. They are the solenoid, rectifier, modified locking catch, modified locking slide, modified transfer lever, and a self tapping screw.

Take the replacement parts for 34 and 36 from the kit. The new parts look similar to the originals. Assemble these parts and drop into place. Loose the screw in the wire end of the solenoid. As pictured bellow place the solenoid into the lock then replace parts 50, 33, and 38. Part 38 gets placed in the left hole for EU and the right for EL. The white spacer at the end of the solenoid gets placed to the left of the bracket for EL and to the right for EU. The final item is the replacement for part 39. After this part is installed the cover is ready to be replaced. The inside of the lock should resemble the picture bellow.

